


TR-6000 Transmitter Remote Control Standard Configuration

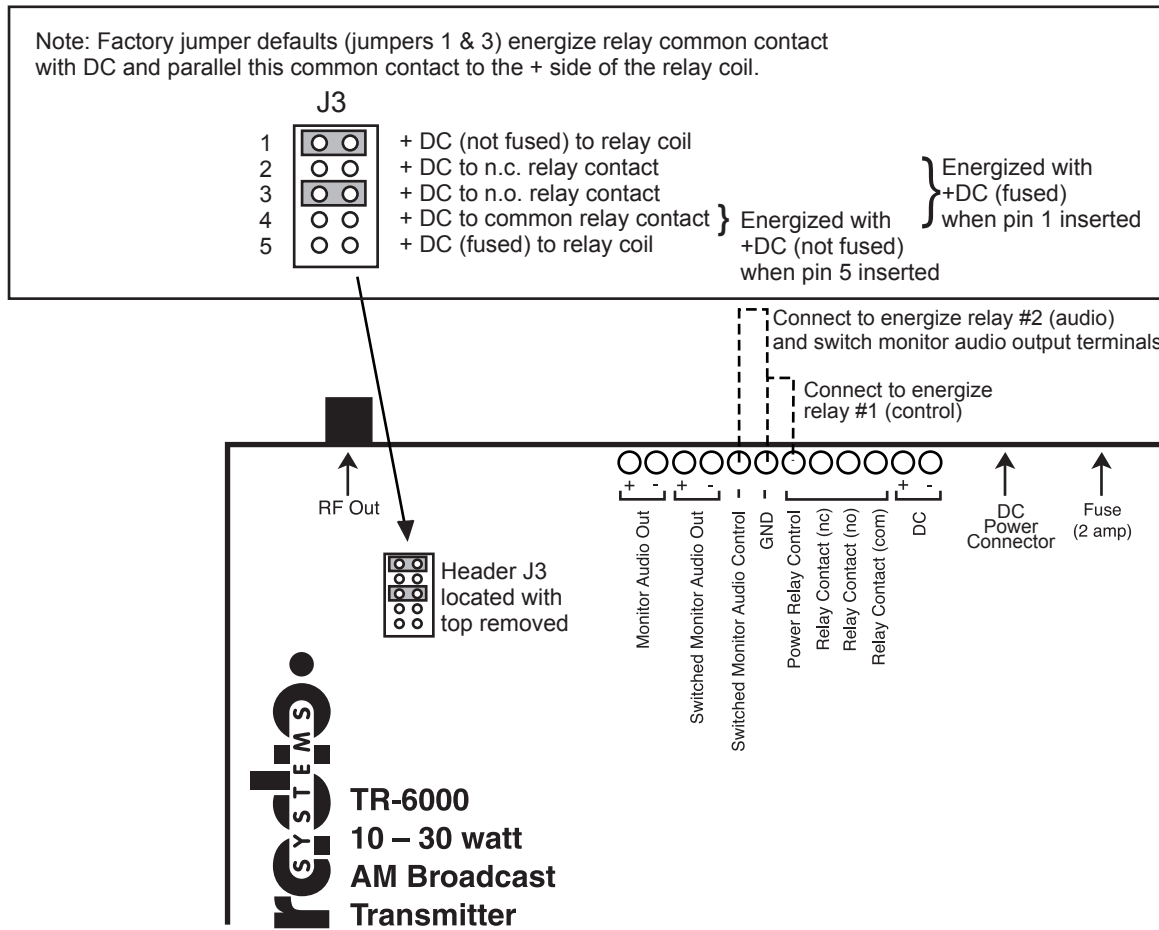

TR-6000 Transmitter Remote Control Remote ON/Off Control Configuration

