


Technical Bulletin

No: 404 – FWD Torque Adjustment Procedure

Adjustment Procedure

1. Put the set into the test mode and load the FWD torque meter TW-7131 (8-909-708-71)
2. Put the set into the PLAY mode
3. Adjust RV305 so that the FWD torque value (take-up side rewinding torque) is between 10-13 g * cm (0.14-0.18 oz * inch)
4. Confirm that the value indicated by the torque meter is maintained for one full cycle

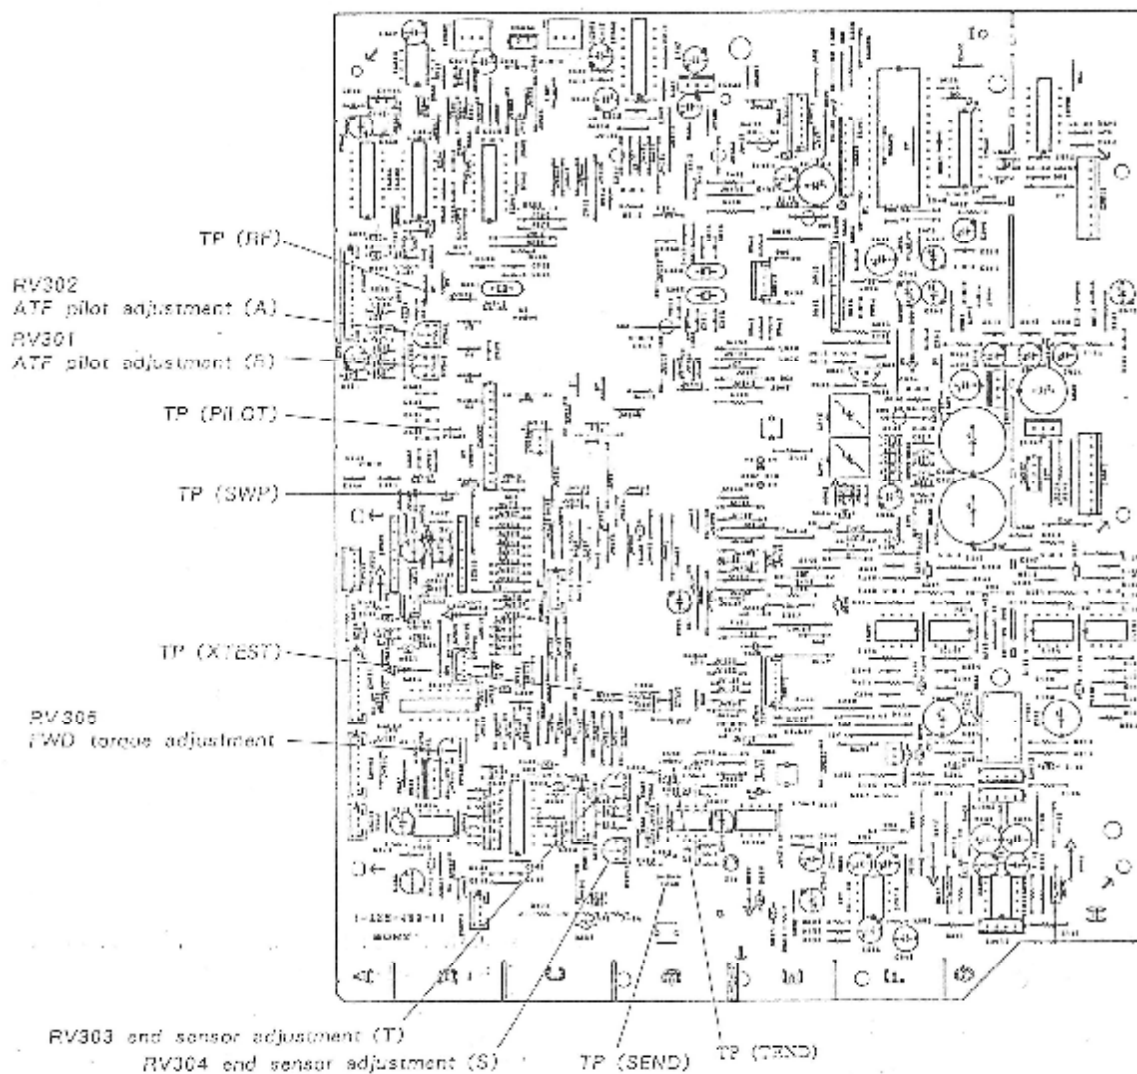

601 Heron Drive
Logan Township, NJ 08085
Phone: 856-467-8000 • Fax: 856-467-3044
<http://www.radiosystems.com>